

# **Portable Unmanned Aerial Vehicle**

## **Control Equipment**

**Model: JHDS-I**



**User Manual V2.0**

# **CONTENT**

- I. Product introduction**
- II. Parts list**
- III. Product function introduction**
- IV. Basic operation**
- V. Sight of action**
- VI. Personal protection**
- VII. Technical specifications**

## **I. Product introduction**

As a portable Unmanned Aerial Vehicle (hereinafter referred to as “UAV”) control equipment based on the principle of transmitting high-intensity electromagnetic waves, WJT-I functions in the flight control system and satellite positioning receiver of various small and medium-sized civil UAVs, and makes them fail by blocking normal communication signals.

This equipment has 420-450MHz, 840~930MHz, 1180~1280Mhz, 1550~1620Mhz, 2400~2500Mhz, 5715~5850MHz. The flight control blocking frequency of six frequency bands, as well as the GPS/QZSS/GLONASS/Galileo satellite positioning blocking frequency, can make the controlled UAV lose control, return, drive away, forced landing or crash through reasonable operations.

This device adopts handheld portable design, with high-strength PC+ABS shell, highly integrated microwave circuit structure and compact miniaturized antenna design. It has the characteristics of firm body, good heat dissipation, easy to carry and use, and long control distance. The device uses a rechargeable lithium battery pack with strong battery life.

This equipment adopts DSSS/FHSS dual-standard interference source, with all-solid-state microwave integrated circuit MMIC technology, and high-density SMT surface mount technology, which has high reliability and can adapt to normal work in severe cold and high temperature environments.

## II. Parts list

Before starting use, check that all of the following items are included in the device package. If anything is missing, please contact your dealer.

	Name	Quantity	Note
1	Host computer	1	
2	Sight	1	With infrared function
3	lithium battery	1	Multiple batteries can be configured
4	Charger	1	
5	Cable	1	
6	Strap	1	
7	Instructions	1	
8	Equipment case	1	

## Product display



### III. Product function introduction



system at the end of the battery, including battery voltage, power and temperature management and control functions, which can be customized to set the battery temperature and high and low voltage alarms, with buzzer alarm sound.



#### Charge the battery with the charger

1. The charging interface is at the end of the battery and the battery display is

together.

2. Connect the charger to the AC power through the power cord, and the indicator light of the charger will turn green;

3. Insert the output plug of the charger into the charging interface of the battery pack;

4. The indicator light on the charger turns red and charging starts;

5. When the charging is finished, the indicator light on the charger will turn green and stop charging automatically.

**WARNING: Do not turn on the device while charging!**

NOTE: The green light on the charger does not completely stop the charging process. The charger may be in a trickle charging process which will last several minutes until the battery is fully charged and the voltage will stop. Therefore, if there are strict requirements on whether the battery pack is fully charged, wait for 10-15 minutes before disconnecting the charger after the indicator light of the charger turns green.


#### IV. Basic operation

##### ▪ Aim in the target direction

This device uses an antenna with directional radiation characteristics. When in use, the antenna needs to be aimed at the target direction.

It can support up to 10 times magnification to observe and locate the target through the sight.

The description of the radiation directionality is shown in the figure below:

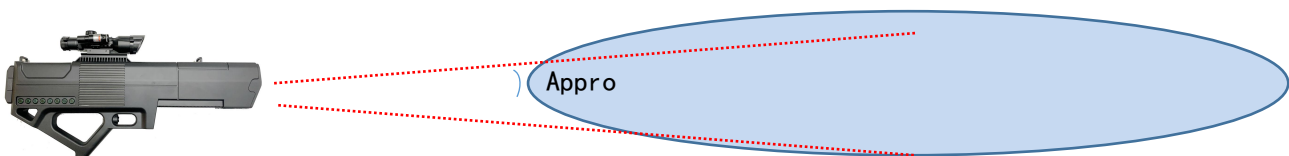

The picture of the radiation direction of the antenna in front of the antenna is a

cone-shaped area of about 25°. The diameter of the radiation cross-section formed at a distance of 200m can reach about 80 meters, and the signal strength in the edge area of the cross-section drops by about 3dB. The straight-line action distance is about Reduced to 70% of the maximum distance, the visual aiming and tracking adopted can fully meet the needs of actual use.

#### ▪ **Select working mode and launch**

The device has a single-channel independent working mode: it can separately turn on the electromagnetic wave signal that needs to be shielded, drive the target UAV out of the current area, and make the target UAV fall out of control or automatically make an forced landing.

If the UAV continues to move after transmitting the jamming signal, it should track its trajectory at any time and try to keep the antenna direction always aligned with the UAV. It is desirable to be able to keep track until the regulatory objectives are achieved. If the UAV is out of the effective radiation range of the control equipment, it only needs to wait a few seconds before it can re-establish contact with the remote control.

When a single channel emits electromagnetic waves independently, turn on the main button switch, and the single channel indicator light will be on at this time, indicating that the single channel of the device is working normally, otherwise the indicator light is off, indicating that the device has stopped working.

#### **V. Sight of action**


The distance of interference depends on the ratio of the strength of the interference signal reaching the UAV to the strength of the remote control flight control signal or satellite navigation signal reaching the UAV. Among them, the strength of the satellite navigation signal is basically a fixed value, so the overall working distance is only related to the position of the UAV and the remote control. At the same time, since this device adopts a directional antenna, its operating range is related to the direction of the antenna. The maximum operating distance is in the maximum radiation direction of the antenna. When it deviates from the maximum

radiation direction, its operating distance will be correspondingly reduced.

The interference range between the flight control signal and the satellite navigation signal is described as follows.

▪ **Flight control signal**

The actual usage scenarios are as follows:

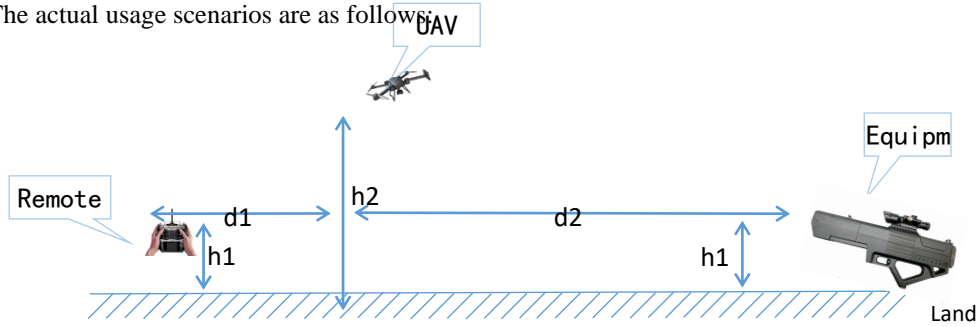

$h_1$ : Distance between the remote control and the device to be measured

$h_2$ : Vertical flight height of UAV (from the ground)

$d_1$ : The horizontal distance between the remote control and the UAV

$d_2$ : The horizontal distance between the device under test and the UAV

Among them,  $h_1$  is generally about 1.5 meters, which is negligible compared with the flying height  $h_2$  of the UAV. The actual test range of flight control signal interference is as follows:

2.4GHz frequency band flight control signal interference action distance (signal maximum direction)

	<b>d1=50m</b>	<b>d1=100m</b>	<b>d1=200m</b>	<b>d1=500m</b>
<b>h2=25m</b>	230m	390m	710m	——
<b>h2=50m</b>	260m	440m	820m	1760m
<b>h2=100m</b>	430m	560m	880m	1770m
<b>h2=200m</b>	790m	860m	1090m	1870m
<b>h2=500m</b>	1690m	1760m	1720m	2190m

5.8GHz frequency band flight control signal interference action distance (signal maximum direction)

	<b>d1=50m</b>	<b>d1=100m</b>	<b>d1=200m</b>	<b>d1=500m</b>
<b>h2=25m</b>	310m	520m	980m	——



<b>h2=50m</b>	360m	620m	1150m	—
<b>h2=100m</b>	630m	780m	1230m	2170m
<b>h2=200m</b>	1110m	1270m	1520m	2310m
<b>h2=500m</b>	2050m	2060m	2220m	2590m

(1) The working distance in the table is the horizontal distance (d2) between the control equipment and the UAV. The lack of data leads to insufficient flight altitude, and the normal flight control signal of the UAV is unstable.

(2) All frequency band UAVs used in the test meet the relevant national requirements, and the quality of the finished UAVs and supporting remote controls is qualified. The transmission power of the remote control has been tested to reach the upper limit of the country's transmission power for this type of equipment.

▪ **Satellite positioning signal**

When interfering with satellite positioning signals, the satellite signal received by the UAV is a constant field strength signal, basically irrelevant to the position of the UAV. However, the signal arrival strength of various satellite positioning systems is slightly different, but the overall difference is not large, so only the actual test results of GPS satellite positioning signals are given below, and the interference distance to other satellite positioning signals is basically the same.

GPS satellite positioning signal interference distance (signal maximum direction)

<b>h2=25m</b>	<b>h2=50m</b>	<b>h2=100m</b>	<b>h2=200m</b>	<b>h2=500m</b>
610m	750m	750m	770m	630m

The working distance in the table is the horizontal distance between the control equipment and the UAV (d2)

When the height of the UAV is low, ground absorption will affect the interference distance to a certain extent; when the height of the UAV is high, the horizontal distance of the actual distance will also be reduced due to the geometric relationship. However, in both cases All can meet the actual use needs.

**VI. Personal protection**

▪ **Avoid radiation damage**

This device works on the principle of emitting high-intensity electromagnetic waves. The harm of any high-intensity electromagnetic waves to the human body should be taken seriously.

At present, there is no clear conclusion on the harm of electromagnetic waves to the human body in the world, but there are relevant standards. There are also related standards such as GB8702-88 in China.

This equipment has been carefully designed, using a strong directional antenna, and optimized by computer-aided design technology, so that the front-to-back ratio of the antenna unit as a whole has reached more than 17dB. In other words, the electromagnetic wave radiation intensity at the rear of the antenna is 1/50 of the front. At the same time, an irregular shape medium is used to intervene in the electric field, with low antenna side lobe effect, thus greatly reducing the radiation impact on the human body. Its electromagnetic radiation intensity to the operator is far lower than the derivation limit of public exposure specified in the national standard. (For more details, please refer to the relevant test report)

**Warning**



In the case of correct use, the electromagnetic radiation of this equipment to the operator meets the relevant standards, but if it is not operated properly, it may exceed the relevant standards.

## VII. Technical specifications

- 1) Working frequency: 420-450MHz, 840~930MHz, 1180~1280MHz,  
1550~1620MHz, 2400~2500MHz, 5715~5850MHz.
- 2) Output power: 120W.
- 3) Signal style: DSSS (spread spectrum) / FHSS (frequency hopping).
- 4) Antenna gain: 12-14dB.
- 5) Battery capacity: 6800mah (one battery, multiple configurations).
- 6) Endurance time:  $\geq 60$  minutes (continuous launch)  $\geq 600$  minutes (30s launch, 90s stop)
- 7) Product weight: host 2.4kg,  
Battery 0.95kg,  
Sight 0.47Kg.
- 8) Product size: host 620\*60\*255mm,  
Battery 170\*98\*52mm,  
Sight 230\*65\*85mm
- 9) Working mode: independent single-channel launch.
- 10) Sight magnification: 3-10 times.
- 11) Control distance: flight altitude 100M control distance  $\geq 1500$ M,  
Flight altitude 200M control distance  $\geq 2000$ M.

